

DrainHub®

QAI-Certified Multi-Port Drain Adapter




The Ultimate Drain Space-Saver.

Every plumber and service tech knows the frustration: appliances like sterilizers, instrument washers, water purification systems, dishwashers, water softeners, washing machines and more all require drain connections—and it's easy to run out of space fast.

Thankfully, now there's the DrainHub® Multi-Port Drain Adapter. This QAI-certified, patent-pending device accepts up to eight drain connections in one small hub—saving space, cost and time!

DrainHub® Multi-Port Drain Adapter is easy to install, and its 1/2" NPT threaded ports accept a variety of push-to-connect, compression, and hose barb adapter fittings.

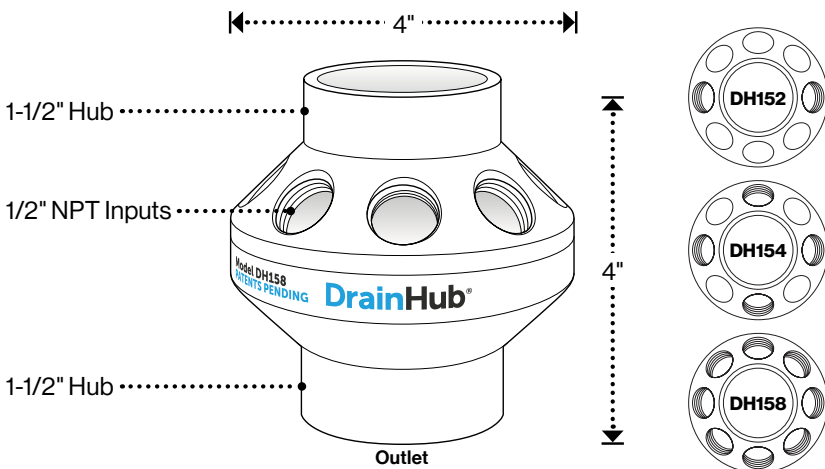

Materials & Dimensions

- Schedule 40 PVC
- 1/2" NPT threaded inputs (2, 4 or 8)
- Top & bottom slip hubs accept 1-1/2" pipe
- Bottom hub O.D. glues into 2" coupling

Codes & Standards Compliance

- ASTM D2665 (PVC)
- ASTM F1498 (Threads)
- ASME A112.18.2-2015
- CSA B125.2-15
- FDA Title 21 Material

Three models available:

DH152: 2 Ports

DH154: 4 Ports


DH158: 8 Ports



Crosstex is now a proud member of


HuFriedyGroup
The Best In Practice

DrainHub® Multi-Port Drain Adapter Positions

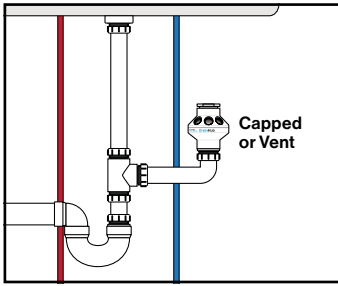


Method A

Installation beside the main drain line can offer maximum flexibility and can be achieved with the use of a simple drain tee adapter fitting.

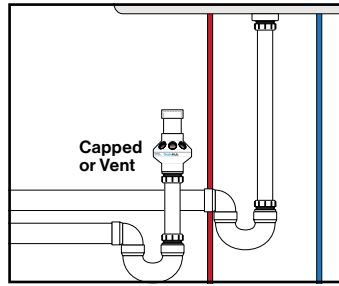


Method B

When possible, as in cases of new construction, it can be beneficial to run parallel drain waste systems to separate waste from the sink from other appliances and devices.

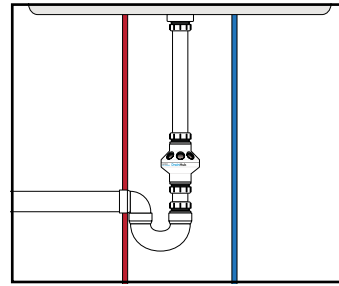






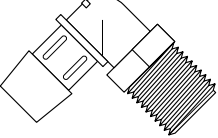
Method C

It is possible to install the DrainHub in the main drain line under a sink. However, this position can result in more audibly noticeable drainage of waste containing a significant amount of air.

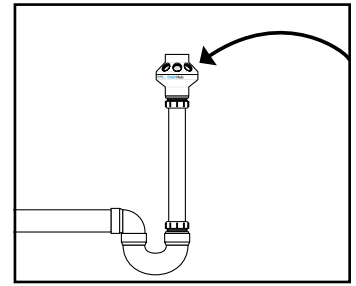

Method D

Use DrainHub on a standpipe to connect a washer discharge, softener drain line, furnace humidifier, A/C condensate, R/O system drain and more.

		Description	SKU	Retail Price
	Sch. 40 DWV White PVC	DrainHub® Multi-Port Drain Adapter, 2-Port	DH152	\$66.20
		DrainHub® Multi-Port Drain Adapter, 4-Port	DH154	\$66.20
		DrainHub® Multi-Port Drain Adapter, 8-Port	DH158	\$66.20
	Natural Polypropylene	Plug (1/2" NPT)	S8015	\$3.50
	White Acetyl	Male Adapter (1/2" NPT x 1/4" Tubing)	S4730	\$4.00
		Male Adapter (1/2" NPT x 3/8" Tubing)	S4728	\$5.40
		Male Adapter (1/2" NPT x 1/2" Tubing)	S4729	\$6.60
	White Acetyl	Swivel Elbow (1/4" Stem x 1/4" Tubing)	S8112	\$3.70
		Swivel Elbow (3/8" Stem x 3/8" Tubing)	S8113	\$4.90
		Swivel Elbow (1/2" Stem x 1/2" Tubing)	S8115	\$5.70
	Natural Polypropylene	Barb Male Adapter (1/2" NPT x 1/4" Barb)	S8214	\$3.50
		Barb Male Adapter (1/2" NPT x 3/8" Barb)	S8216	\$3.50
		Barb Male Adapter (1/2" NPT x 1/2" Barb)	S8218	\$4.90
		Barb Male Adapter (1/2" NPT x 5/8" Barb)	S8220	\$3.50
		Barb Male Adapter (1/2" NPT x 3/4" Barb)	S8222	\$4.00
	Natural Polypropylene	Barb Elbow Adapter (1/2" NPT x 1/4" Barb)	S8314	\$4.60
		Barb Elbow Adapter (1/2" NPT x 3/8" Barb)	S8316	\$4.60
		Barb Elbow Adapter (1/2" NPT x 1/2" Barb)	S8318	\$4.60
		Barb Elbow Adapter (1/2" NPT x 5/8" Barb)	S8320	\$4.60
		Barb Elbow Adapter (1/2" NPT x 3/4" Barb)	S8322	\$4.60

Important: Always install a 1/2" NPT threaded plug in any unused port(s) of the DrainHub® Multi-Port Drain Adapter, and always follow applicable local plumbing codes.

Learn More at [HuFriedyGroup.com](https://www.hufriedy.com)